

Linksys ATA

PAP2, PAP2T-NA

Configuration Guide



 


Find the IP Address


- 1. Lift the handset of the phone connected to your ATA, Dial **** to initiate the IVR Menu
- 2. Wait to be instructed to enter your command.
- 3. Dial 110# and the IP address will be played to you

Manual Configuration

1. Find the IP Address (above) of the device and open a web browser to the IP address of the device. IP addresses will typically start with 192.168...





2. Login with the device user password. The default password is typically blank (no password) or admin.

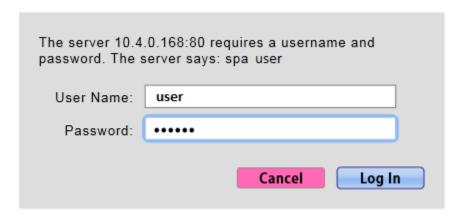



3. Click on the **Admin Login** option at the top right and login with the admin user. After a reset, the default password is blank (no password) or admin

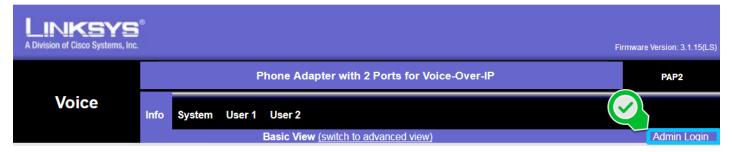

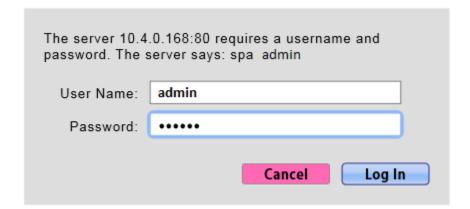

4. Click on the **Switch to advanced view** option at the top.






5. Click on **Regional** tab at the top.



Scroll to bottom and of page, under **Miscellaneous** section, select your correct **Time Zone**, then click **Save Settings**.

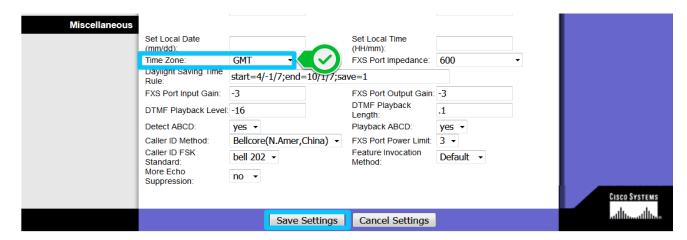



6. Click on Line 1 tab at the top.




Scroll down page to NAT Settings




Scroll down page to SIP Settings

SIP Port = 5060

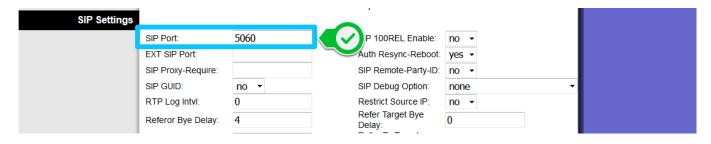

Scroll down page to Proxy and Registration

Proxy = sip1-on.vbuzzer.com

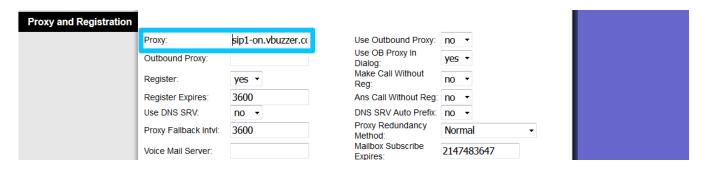



Scroll down to Subscriber Information, and enter your Account ID (not your username) and Account Password details (without shown brackets).

User ID = [Your VBuzzer Account ID] (not your Username)
Password = [your VBuzzer Account Password] (the long one)



Then click Save Settings



Reboot your ATA device (unplug, wait 15 seconds, reconnect). Your ATA will then reboot and connect to the VBuzzer network.

Reset to Factory Defaults

- ** Only perform this if you know what you are doing!
- 1. Lift the handset of the phone connected to your ATA, Dial **** to initiate the IVR Menu
- 2. Wait to be instructed to enter your command.
- 3. Dial 73738 and Press 1 to confirm when prompted.