VBUZZER

Cisco ATA's
SPA 112 and 122

Configuration Guide

Find the IP Address

Quick Steps

> 1. Lift the handset of the phone connected to your ATA, Dial **** to initiate the IVR Menu
> 2. Wait to be instructed to enter your command.
> 3. Dial 110# and the IP address will be played to you

How To Set The Configuration

Quick Steps

> 1. Find the IP Address of the ATA device (above) and open a web browser to the IP address of the device.
> 2. Login with your ATA device user password.
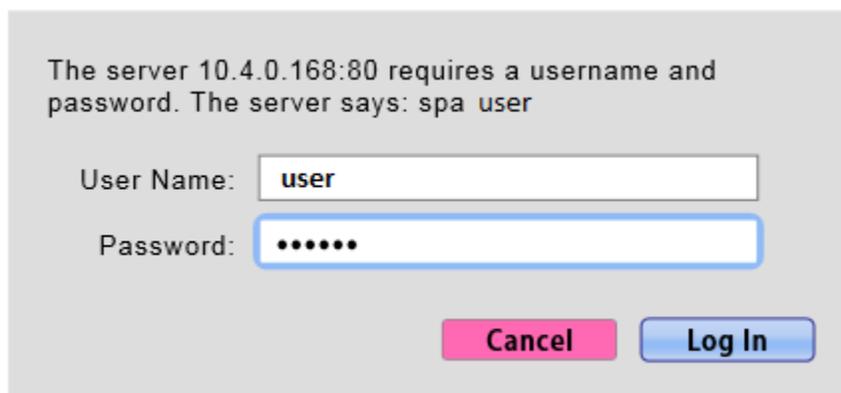
The server 10.4.0.168:80 requires a username and password. The server says: spa user

User Name: user
Password: ••••••

Cancel   Log In

VBUZZER

Quick Setup

Go to the Quick Setup and enter Line 1 details (without shown brackets):

Proxy = sip1-on.vbuzzer.com

User ID = [your VBuzzer Account ID] (not your username)

Password = [your VBuzzer Account Password) (the long one)

Dial Plan =

(*xx.|**xx|[23456789]11|0|00|[2-9]xx[2-9]xxxxxxS0|1[2-9]xx[2-9]xxxxxxS0|011[2-9]xxxxxx.)
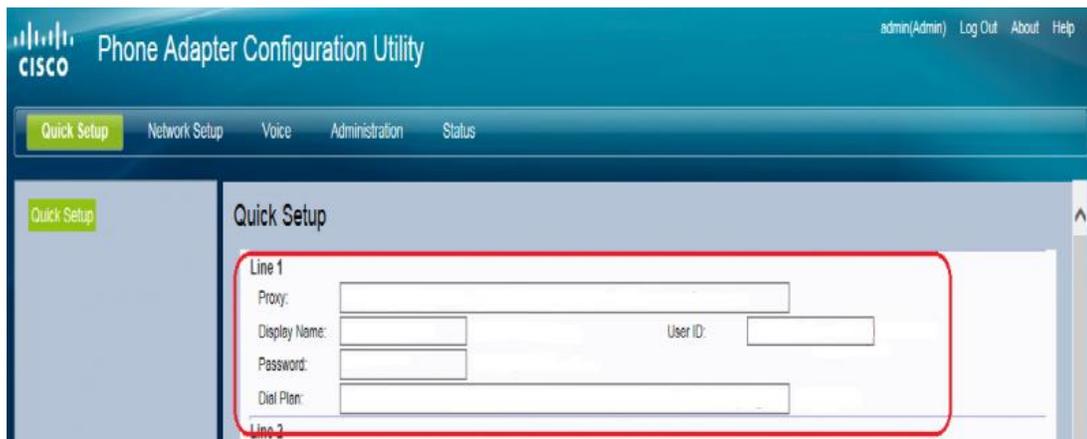
Click Submit to save.

VBUZZER

Configuring the Voice Line

Click on Voice (from top menu), then Line 1 (from left menu).
The following items should be set:

General
Line Enable   = Yes

NAT Settings
NAT Mapping Enable   = Yes

NAT Keep Alive Enable   = Yes

SIP Settings
SIP Port   = 5060 (default)

Proxy and Registration
Proxy   = sip1-on.vbuzzer.com

Register Expires   = 1800

Proxy Fallback Intvl   = 900

Use DNS SRV   = No

DNS SRV Auto Prefix   = No

Subscriber Information
User ID   = [your VBuzzer Account ID] (not your username)

Password   = [your VBuzzer Account Password] (the long one)

User Auth ID   = No

Dial Plan
Dial Plan   =

(*xx.|**xx|[23456789]11|0|00|[2-9]xx[2-9]xxxxxxS0|1[2-9]xx[2-9]xxxxxxS0|011[2-9]xxxxxx.)

Click Submit to save.

Reset to Factory Defaults

Quick Steps

1. Lift the handset of the phone connected to your ATA, Dial **** to initiate the IVR Menu
2. Wait to be instructed to enter your command.
3. Dial 73738 and Press 1 to confirm when prompted.